


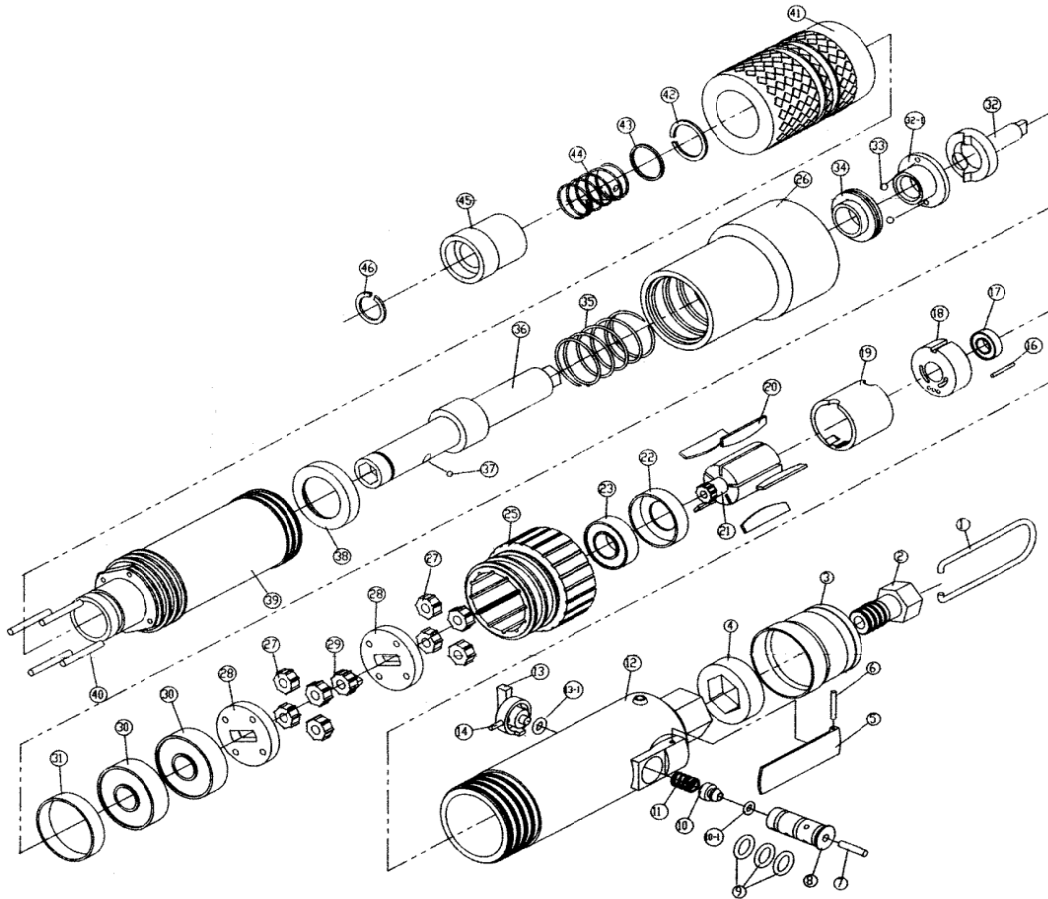

IMPACT SCRWR DRIVER - RT 503

SPARE PARTS LIST



SI.NO	PART NO	DESCRIPTION	SI.NO	PART NO	DESCRIPTION
1	SRT 503-01	HANGER	25	SRT 503-25	INTERNAL GEAR
2	SRT 503-02	INLET BUSH	26	SRT 503-26	GEAR CASE
3	SRT 503-03	BLOW COVER	27	SRT 503-27	FREE GEAR
4	SRT 503-04	EXHAUST DEFLECTOR	28	SRT 503-28	GEAR FRAME
5	SRT 503-05	LEVER	29	SRT 503-29	FREE GEAR
6	SRT 503-06	PIN	30	SRT 503-30	BEARING
7	SRT 503-07	PIN	31	SRT 503-31	BEARING SPACER
8	SRT 503-08	VALVE BIDY	32	SRT 503-32	CLUTCH
9	SRT 503-09	INLET WASHER	33	SRT 503-32-1	SPINDLE (FRONT)
10	SRT 503-10	VALVE	34	SRT 503-33	CAM CLUTCH BALL
11	SRT 503-10-1	O RING	35	SRT 503-34	BALL SEAT
12	SRT 503-11	SPIILING	36	SRT 503-35	SPIILING
13	SRT 503-12	FRAME	37	SRT 503-36	SPIILING (FRONT)
14	SRT 503-13	REVERSE VALVE	38	SRT 503-37	CAM CLUTCH BALL
15	SRT 503-13-1	O RING	39	SRT 503-38	SPRING RECEIVER
16	SRT 503-14	PIN	40	SRT 503-39	CLUTCH COVER
17	SRT 503-16	PIN	41	SRT 503-40	PIN
18	SRT 503-17	BEARING	42	SRT 503-41	ADJUST DIAL
19	SRT 503-18	END PLATE (BACK)	43	SRT 503-42	C-PIN
20	SRT 503-19	CYLINDER	44	SRT 503-43	WASHER
21	SRT 503-20	ROTOR PROPELLER	45	SRT 503-44	SPIILING
22	SRT 503-21	ROTOR	46	SRT 503-45	PIT STOPPER WASHER
23	SRT 503-22	END PLATE (FRONT)	47	SRT 503-46	C-PIN
24	SRT 503-23	BEARING			

