


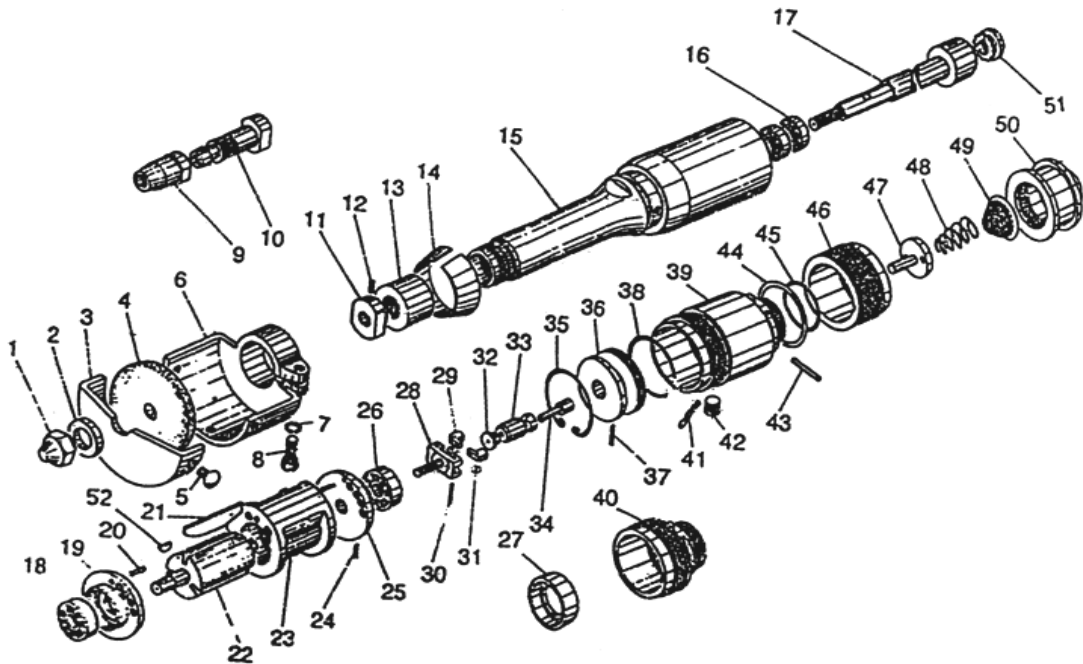

RT 50 - DIE GRINDER



SI.NO	PART NO	DESCRIPTION	QTY	SI.NO	PART NO	DESCRIPTION	QTY
1	SRT 50-01	ACORN NUT	1	27	SRT 50-27	BEARING CAP	1
2	SRT 50-02	OUTER WHEEL COLLAR	1	28	SRT 50-28	GOVERNER BODY	1
3	SRT 50-03	GUARD COVER	1	29	SRT 50-29	GOVERNER WEIGHT	1
4	SRT 50-04	GRINDING WHEEL	1	30	SRT 50-30	GOVERNER WEIGHT PIN	1
5	SRT 50-05	RD.HD. SCREW	3	31	SRT 50-31	GOVERNER WEIGHT SPACER	2
6	SRT 50-06	WHEEL GUARD	1	32	SRT 50-32	GOVERNER VALVE BUTTON	4
7	SRT 50-07	SPRING WASHER	1	33	SRT 50-33	GOVERNER VALVE CAGE	2
8	SRT 50-08	SCREW	1	34	SRT 50-34	GOVERNER VALVE	4
9	SRT 50-09	COLLET NUT	1	35	SRT 50-35	SPRING RETAINER	1
10	SRT 50-10	COLLET BODY	1	36	SRT 50-36	GOVERNER HOUSING	1
11	SRT 50-11	INNER WHEEL COLLAR	1	37	SRT 50-37	GOVERNER STOP PIN	1
12	SRT 50-12	SET SCREW	1	38	SRT 50-38	O - RING	1
13	SRT 50-13	BEARING CLAMP NUT	1	39	SRT 50-39	GOV.& THR. HOUSING	1
14	SRT 50-14	EXHAUST DEFLECTOR	1	40	SRT 50-40	THROTTLE HOUSING	1
15	SRT 50-15	ROTOR HOUSING	1	41	SRT 50-41	OIL WICK 12" L	1
16	SRT 50-16	BALL BEARING	2	42	SRT 50-42	PLUG	1
17	SRT 50-17	SPINDLE	1	43	SRT 50-43	LOCK PIN	1
18	SRT 50-18	BALL BEARING	1	44	SRT 50-44	FRICTION PLATE	2
19	SRT 50-19	LOWER AND PLATE	1	45	SRT 50-45	O - RING	1
20	SRT 50-20	END PLATE DOWEL	2	46	SRT 50-46	THROTTLE SLEEVE	1
21	SRT 50-21	ROTOR BLADE	3	47	SRT 50-47	THROTTLE VALVE	1
22	SRT 50-22	ROTOR	1	48	SRT 50-48	THROTTLE SPRING	1
23	SRT 50-23	CYLINDER LINER	1	49	SRT 50-49	STRAINER	1
24	SRT 50-24	PIN	1	50	SRT 50-50	AIR INLET BUSHING	1
25	SRT 50-25	UPPER END PLATE	1	51	SRT 50-51	SPINDLE COUPLING	1
26	SRT 50-26	BALL BEARING	1	52	SRT 50-52	ROTOR KEY	1

RAMSIVE TOOLS PVT.LTD.

S.F.No:412, Tex park Road, Nehru Nagar, SITRA, Coimbatore-641014.

Phone: 91-422-2905003 - Mobile: 9047023253.