


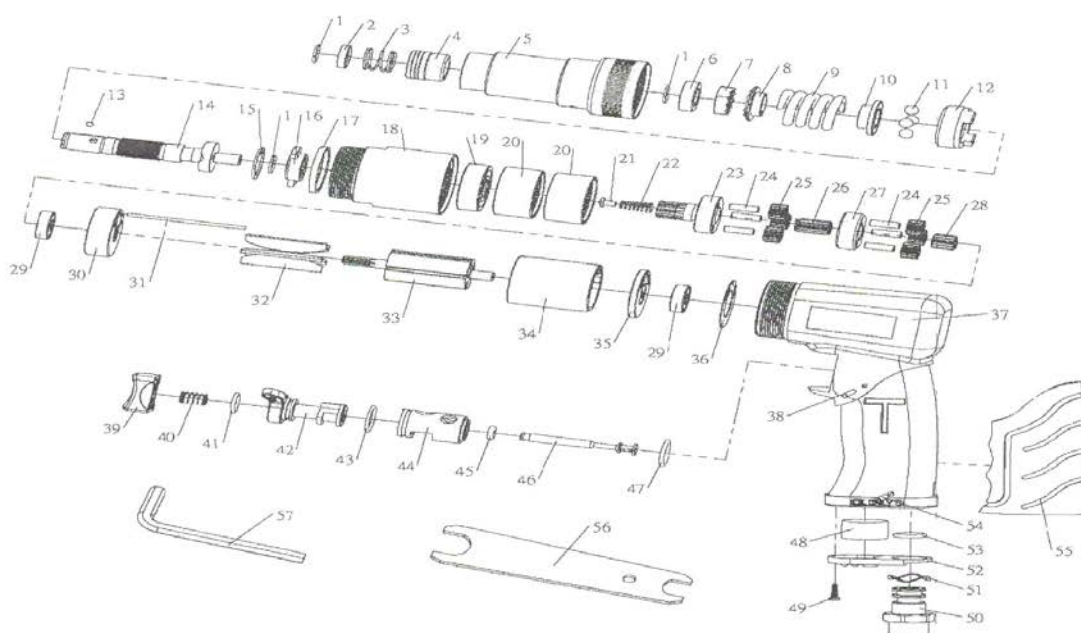

RT 5022 – 1/4 ” SCREW DRIVER



SI.NO	PART NO	DESCRIPTION	QTY	SI.NO	PART NO	DESCRIPTION	QTY
1	SRT 5022-01	RETAINING RING	3	30	SRT 5022-30	FRONT PLATE	1
2	SRT 5022-02	WASHER	1	31	SRT 5022-31	PIN	1
3	SRT 5022-03	SPRING	1	32	SRT 5022-32	ROTOR BLADE	5
4	SRT 5022-04	BALL RETAINER	1	33	SRT 5022-33	ROTOR	1
5	SRT 5022-05	CLUTCH HOUSING	1	34	SRT 5022-34	CYLINDER	1
6	SRT 5022-06	SPACER	1	35	SRT 5022-35	END PLATE	1
7	SRT 5022-07	ADJUST NUT	1	36	SRT 5022-36	CYLINDER WASHER	1
8	SRT 5022-08	WASHER	1	37	SRT 5022-37	HOUSING	1
9	SRT 5022-09	SPRING	1	38	SRT 5022-38	PIN	1
10	SRT 5022-10	WASHER	1	39	SRT 5022-39	TRIGGER	1
11	SRT 5022-11	STEEL BALL	4	40	SRT 5022-40	SPRING	1
12	SRT 5022-12	CLUTCH CARRIER	1	41	SRT 5022-41	O - RING	1
13	SRT 5022-13	STEEL BALL	1	42	SRT 5022-42	REVERSE VALVE	1
14	SRT 5022-14	CAM SPINDLE	1	43	SRT 5022-43	O - RING	1
15	SRT 5022-15	INTERNAL STOP RING	1	44	SRT 5022-44	REVERSE VALVE BUSH	1
16	SRT 5022-16	DRIVE DOG	1	45	SRT 5022-45	O - RING	1
17	SRT 5022-17	RING	1	46	SRT 5022-46	THROTTLE VALVE	1
18	SRT 5022-18	CLAMP NUT	1	47	SRT 5022-47	O - RING	1
19	SRT 5022-19	BALL BEARING	1	48	SRT 5022-48	MUFFLER	1
20	SRT 5022-20	INTERNAL GEAR	1	49	SRT 5022-49	TAPING SCREW	1
21	SRT 5022-21	SPRING GUIDE	1	50	SRT 5022-50	AIR INLET	1
22	SRT 5022-22	CONE SPRING	1	51	SRT 5022-51	WAVE WASHER	1
23	SRT 5022-23	WORK SPINDLE	1	52	SRT 5022-52	EXHAUST DIFFUSER	1
24	SRT 5022-24	NEEDLE ROLLER	3	53	SRT 5022-53	O - RING	1
25	SRT 5022-25	IDELR GEAR	6	54	SRT 5022-54	PIN	1
26	SRT 5022-26	REDUCTION GEAR	1	55	SRT 5022-55	COVER	1
27	SRT 5022-27	REDUTION SPINDLE	1	56	SRT 5022-56	WRENCH	1
28	SRT 5022-28	PINION GEAR	1	57	SRT 5022-57	HEXAGON WRENCH KEY	1
29	SRT 5022-29	BEARING	2				

RAMSIVE TOOLS PVT.LTD.

S.F.No:412, Tex park Road, Nehru Nagar, SITRA, Coimbatore-641014.

Phone: 91-422-2905003 - Mobile: 9047023253.