




RT 5S – ANGLE GRINDER

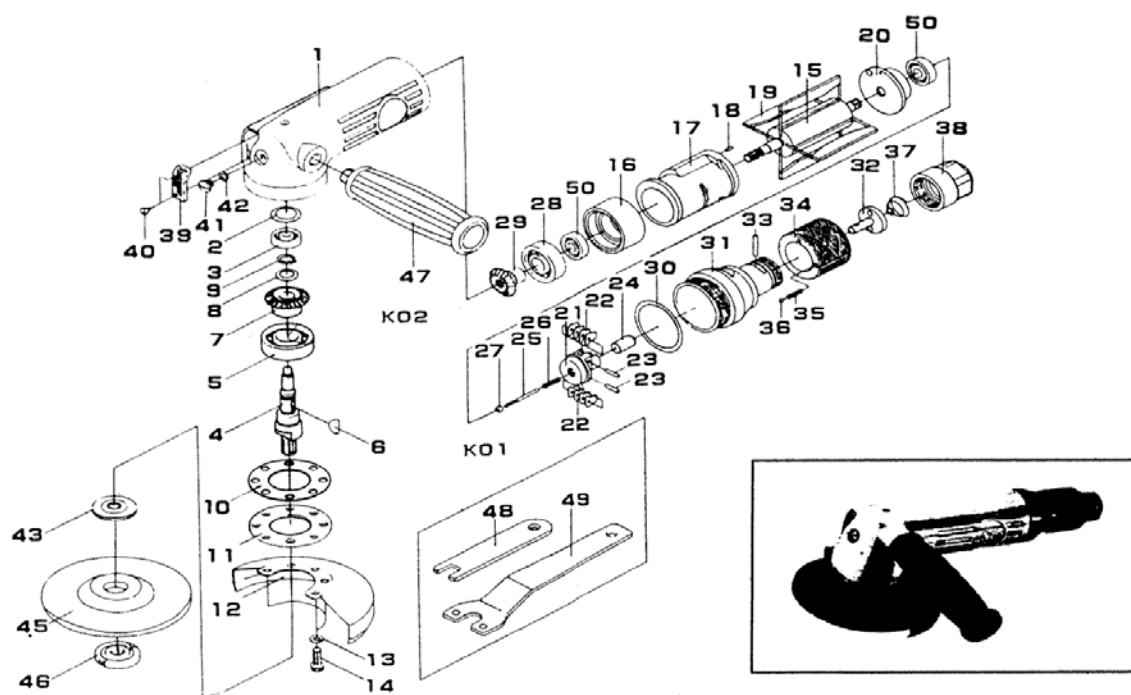

SI.NO	PART NO	DESCRIPTION	QTY	SI.NO	PART NO	DESCRIPTION	QTY
1	SRT 5S-01	MOTOR HOUSING	1	26	SRT 5S-26	SPRING	1
2	SRT 5S-02	SEAL PLATE	1	27	SRT 5S-27	ADJUST NUT	1
3	SRT 5S-03	BALL BEARING	1	28	SRT 5S-28	BALL BEARING	1
4	SRT 5S-04	ARBOR	1	29	SRT 5S-29	BEVEL PINION	1
5	SRT 5S-05	BALL BEARING	1	30	SRT 5S-30	O - RING	1
6	SRT 5S-06	WOODRUFF KEY	1	31	SRT 5S-31	GOVERNOR HOUSING	1
7	SRT 5S-07	BEVEL GEAR	1	32	SRT 5S-32	THROTTLE VALVE	1
8	SRT 5S-08	WAVE WASHER	1	33	SRT 5S-33	NEEDLE ROLLER	1
9	SRT 5S-09	EXTERNAL STOPPING	1	34	SRT 5S-34	VALVE RING	1
10	SRT 5S-10	GASKET	1	35	SRT 5S-35	VALVE SPRING	1
11	SRT 5S-11	RETAINER	1	36	SRT 5S-36	STEEL BALL	1
12	SRT 5S-12	CENTER WHEEL GUARD	1	37	SRT 5S-37	COIL SPRING	1
13	SRT 5S-13	SPRING WASHER	5	38	SRT 5S-38	VALVE JOINT	1
14	SRT 5S-14	HEX SOCKET HEAD CAP BOLT	5	39	SRT 5S-39	EXHAUST DEFLECTOR	1
15	SRT 5S-15	ROTOR	1	40	SRT 5S-40	TAPPING SCREW	2
16	SRT 5S-16	FRONT END PLATE	1	41	SRT 5S-41	PLUG	1
17	SRT 5S-17	CYLINDER	1	42	SRT 5S-42	O - RING	1
18	SRT 5S-18	SPRING PIN	1	43	SRT 5S-43	FLANGE	1
19	SRT 5S-19	ROTOR BLADE	4	44	SRT 5S-45	GRINDING WHEEL	1
20	SRT 5S-20	REAR END PLATE	1	45	SRT 5S-46	FLANGE NUT	1
21	SRT 5S-21	GOVERNOR	1	46	SRT 5S-47	HANDLE	1
22	SRT 5S-22	PENDULUM	8	47	SRT 5S-48	WRENCH (A)	1
23	SRT 5S-23	SPRING PIN	2	48	SRT 5S-49	WRENCH (B)	1
24	SRT 5S-24	PLUNGER	1	49	SRT 5S-50	BALL BEARING	2
25	SRT 5S-25	ADJUST SCREW	1				

RAMSIVE TOOLS PVT.LTD.

S.F.No:412, Tex park Road, Nehru Nagar, SITRA, Coimbatore-641014.

Phone: 91-422-2905003 - Mobile: 9047023253.